RS3 - SX

With you on the front line

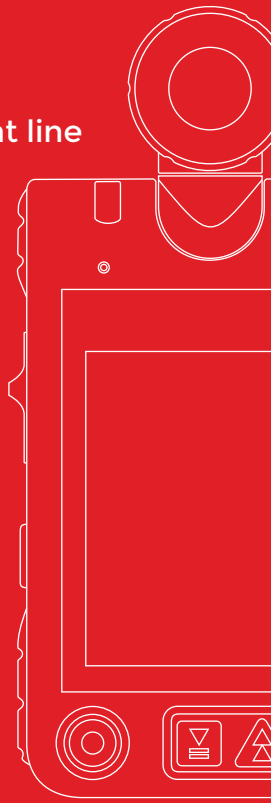

Quick Start and User Manual

REVEAL
WITH YOU ON THE FRONT LINE

REVEALMEDIA.COM

REVEAL

Introduction

Welcome to the most versatile body camera in the world. For your convenience, the camera is set up and ready to go in three easy steps.

1 Charge

Charge the camera for three hours or until the charging light turns green.

2 Mount

Choose how to mount your camera; you can use either the Klickfast attachments, clips or a lanyard.

3 Record

Slide the red switch down to start recording. To stop recording, slide the red switch up.

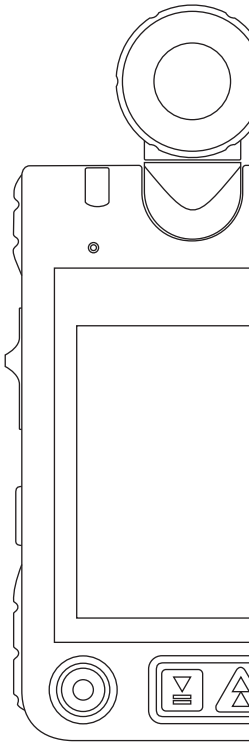

1 Charge

Open the cover on the side of the camera

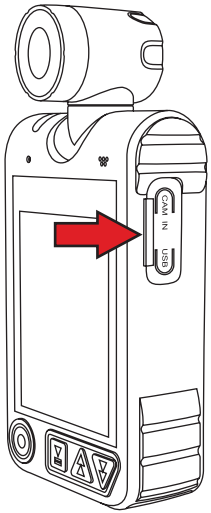

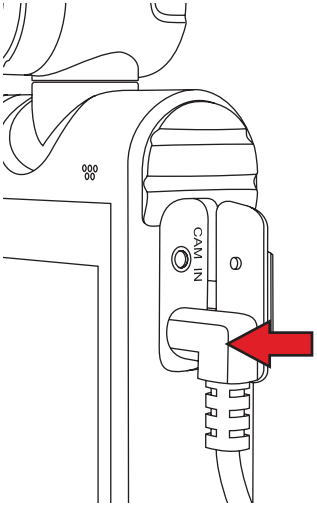

Insert the 3.5mm jack into the USB port and connect to a computer or plug to charge.

NOTE: This is the same cable that will upload video to a computer.

2 Mount

Choose your mount

- klickfast
- pocket clip / lanyard

Align the mount on the back of the camera and use a screw to secure.

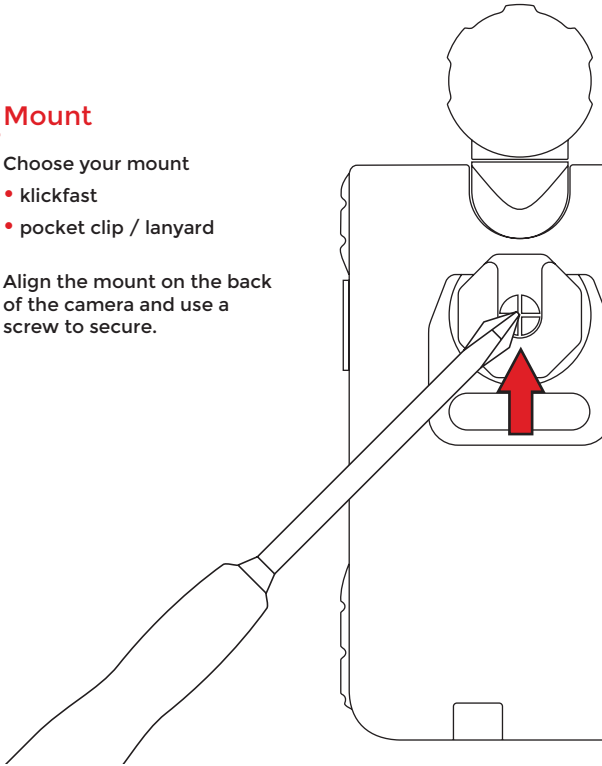

Quick start

3 Record

Pull down the red switch to record.

As confirmation:

- The camera will beep three times.
- The LED and the recording light on the screen will flash red.

Pull the switch back up to stop recording.

As confirmation:

- The camera will beep twice.
- The lights will stop flashing.

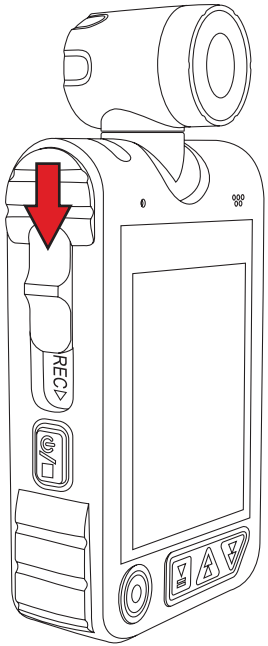

Operation

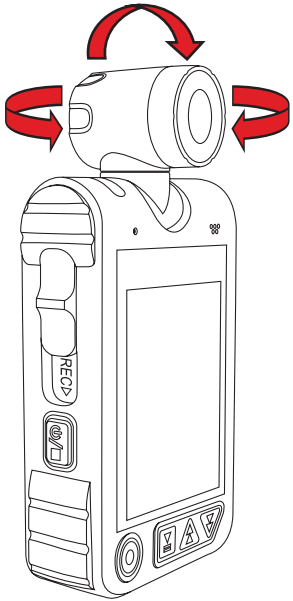

Camera articulation

CAUTION: DO NOT OVER ROTATE!
The camera head does not rotate 360°

Operation

Power on/off / Go back

When the unit is off, press and hold to turn power on. Press and hold to turn power off.
When in preview mode, press **POWER** to go back.

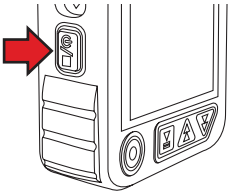

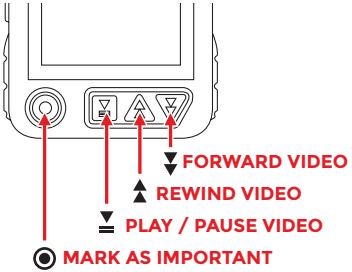

On board playback

Hold down the **POWER** button to turn the camera on.

Once on, press the **PLAY** button to open the playback mode.

Mark as important

Select a video in thumbnail view and press to mark video.

The symbol will appear in the bottom right corner of the thumbnail.

Stealth mode

Hold **FWD** or **RWD** button for three seconds to activate or deactivate Stealth Mode.

Stealth mode enables recording without the front facing screen or LED light.

Operation

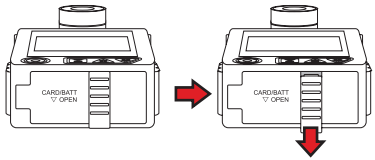

Battery and microSD card insertion

Slide catch down to open battery and microSD card cover

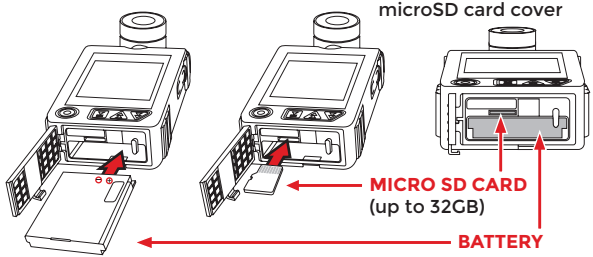

Head camera input

Insert external camera cable into the port on the right side of the camera. Only use authorised Reveal external cameras.

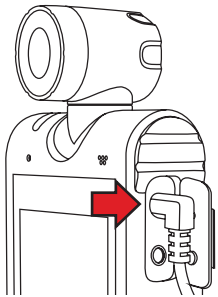

Settings

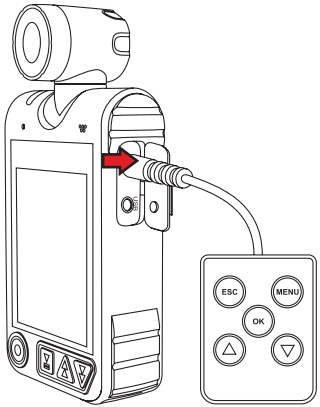

Insert key pad and press **MENU** to begin.

Press **ESC** to exit menu.

Press **OK** to select option.

Press **UP** to scroll through options.

Press **DOWN** to scroll through options.

Through DEMS

Open the auto-uploader or camera interface. Right click on a camera and select “settings”.

Without DEMS

NOTE: You must be the administrator on the computer to change the camera settings.

1) Download the Reveal camera settings manager from www.revealmedia.com/downloads
2) Run the program on the computer
3) Select which camera you want to edit from the list on the left and edit the options on the right.

LED light notification

	ON recording	ON not recording	OFF not recording
Not Charging	Flashing RED	RED	No LED on
Charging via Mains Charger	RED & BLUE alternate flashing	BLUE	BLUE
Charged Via Mains Charger	RED & GREEN alternate flashing	GREEN	GREEN
Charging via Docking Station plugged ONLY into Mains	RED & BLUE alternate flashing	BLUE	BLUE
Charged via Docking Station plugged ONLY into Mains	RED & GREEN alternate flashing	GREEN	GREEN
Charging via USB Cable plugged into PC (In Mass Storage Mode)	N/A	RED & BLUE alternate flashing	N/A
Charged via USB Cable plugged into PC (In Mass Storage Mode)	N/A	RED & GREEN alternate flashing	N/A
Charging via Docking Station plugged into both Mains and PC (In Mass Storage Mode)	N/A	RED & BLUE alternate flashing	N/A
Charged via Docking Station plugged into both Mains and PC (In Mass Storage Mode)	N/A	RED & GREEN alternate flashing	N/A

Editable menu settings

1. RESOLUTION	1280 x 720 30FPS (DEFAULT)
	848 x 480 60FPS
	1920 x 1080 30FPS
	1440 x 1080 30FPS
2. PRE-RECORDING Stores 30 seconds prior to record activation	ON
	OFF (DEFAULT)
3. AUDIO ALARMS	ON (DEFAULT)
	OFF
4. WHITE BALANCE	AUTO (DEFAULT)
	SUNNY / CLOUDY / FLUORESCENT/INCANDESCENT
5. LANGUAGE	ENGLISH (DEFAULT)
6. TIME AND DATE STAMP	ON (DEFAULT)
	OFF
7. TIME AND DATE SETUP	SET YYYY/MM/DD HR/MIN/SEC
8. START IN STEALTH MODE	ON
	OFF (DEFAULT)
9. AUTO LCD OFF	30 SECS / 2 MIN / 5 MINS / OFF

Editable menu settings

10. DEFAULT SETTINGS	NO / YES
11. UNIT ID SETUP	USER SET (five alphanumerics)
12. PRE-RECORD MUTE No audio is recorded during the pre-record section of video. Once the user slides into record mode, audio is then recorded	ON
	OFF (DEFAULT)
13. PROTECTED MODE The files cannot be played back on standard media players. Playback requires Reveal Media DEMS V3 or above	ON
	OFF (DEFAULT)
14. TRUSTED MODE RS3 - SX will not mount as mass storage device unless connected to Reveal Media DEMS V3 or above	ON
	OFF (DEFAULT)
15. RECORD OFF MODE For single or two actions to stop recording	SLIDER ONLY (DEFAULT)
	SLIDER PLUS BUTTON
16. FIRMWARE VERSION	Displays what version of firmware is installed on the device

WARNING!

- Camera head does not rotate completely 360°.
FORCING IT WILL CAUSE DAMAGE TO THE CAMERA HEAD!

- Please take care when connecting and disconnecting the USB cable.

Mounting and usage options



Klickfast

Attach the klickfast to use with a klickfast dock.

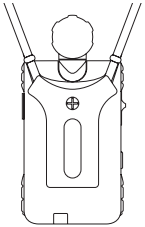

Pocket clip / Lanyard

For use in a non-confrontational environment.

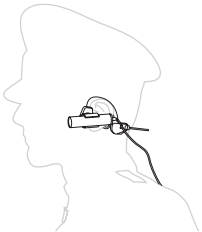

Head Mount

For use when a higher view point is advantageous.
(optional extra)

Mounting and usage options

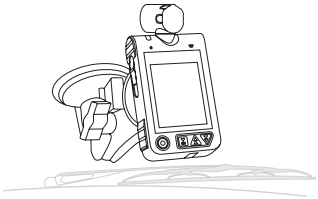

For in-car use

Attach suction mount to windscreen or dashboard for in-car camera.
(optional extra)

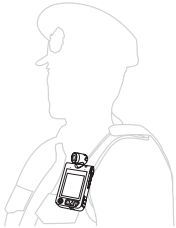

Harness

For use with loose fitting clothes or uniforms.
(optional extra)

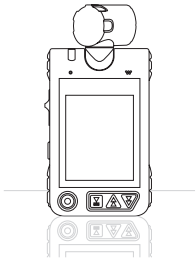

Table top

For use in interviews and other static situations.